BAND KNIFE CUTTING MACHINE

INSTRUCTION MANUAL

Band Knife Cutting Machine Spare Parts Form

NO.	NAME	NO.	NAME	NO.	NAME
1	BEARING COVER	40	ANTI-DUST COVER	79	ROUND 206 BERING SHELL
2	FRONT AXLE	41	GRINDING WHEEL BOX	80	MOTOR PULLEY
3	205 BEARING	42	ASH LOADING BOX	81	BLOCKAGE
4	205 BEARING COVER	43	SCREW	82	CORED SCREW
5	HEAD	44	OIL BOX (LEFT)	83	SIX ANGLE SCREW
6	INNER SIX ANGEL LOCKING SCREW	45	OIL BOX (RIGHT)	84	HORIZONTAL ADJUSGINT SCREW
7	PROTECTIVE COVER BASE	46	ANGLE IRON	85	SCREW BLOCK
8	ALUMINUM FIXED BLCOK	47	M12 NUT	86	TRUCKLE
9	206 BEARING COVER	48	FIXED ANGLE IRON	87	TABLE SUPPORT SEAT
10	206 BEARING	49	FIXED BLOCK	88	ADJUSTING POLE
11	ALUMINUM WHEEL COVER	50	LIFTING POLE	89	ROUND BLOCK(UP)
12	6204 BEARING	51	FIXING BLCOK	90	ROUND BLOCK(DOWN)
13	ALUMINUM WHEEL	52	LOCK-SCREW	91	BEDPLATE STRIP
14	5x8 SCREW CAP	53	BASE STRIP	92	GASKET
15	FRONT COVER	54	KNIFE BEARING COVER	93	TABLE
16	KNIFE PROTECTION BOARD	55	KNIFE BASE	94	SWITCH FIXING BLOCK
17	M8 NUT(POSTIVE)	56	BUMPER	95	SWITCH
18	M9 NUT(NEGATIVE)	57	BACK COVER		
19	GRINDING WHEEL SPINDLE	58	BOX		
20	GRINDING WHEEL	59	ADJUSTING POLE		
21	608 BEARING	60	SPRING 20		
22	SHARPENER SEAT CONNECTING BELT	61	M18 NUT		
23	RIGHT WHEEL SEAT	62	BOX BLOCK BOARD		
24	OLIVE-SHAPE SPRING	63	CONNECTING BOARD 1		
25	LEFT WHEEL SEAT	64	CONNECTING BOARD 2		
26	M6x40 SCREW	65	BEND TUBE		
27	WING-SHAPE NUT	66	UP ALUMINUM STRIP		
28	GRINDING WHEEL BASE SLIDER	67	DOWN ALUM-STRIP		
29	GRINDING WHEEL STOPPER	68	FIXING ANGLE IRON		
30	CROSS SCREW	69	RIGHT DOOR		
31	SHARPEN BASE AXLE	70	FRONT DOOR		
32	M6x20 SCREW	71	FRONT DOOR STRIP		
33	M8 WING NUT	72	LEFT DOOR		
34	M8 SCREW	73	BACK DOOR		
35	ADJUSTING POLE	74	LOWER FRAME		
36	ADJUSTING RING	75	NUT		
37	AXLE FIXED COVER	76	GASKET		
38	LOCATING RING	77	IRON BELT WHEEL		
39	FIXED SPINDLE	78	IRON WHEEL AXLE		

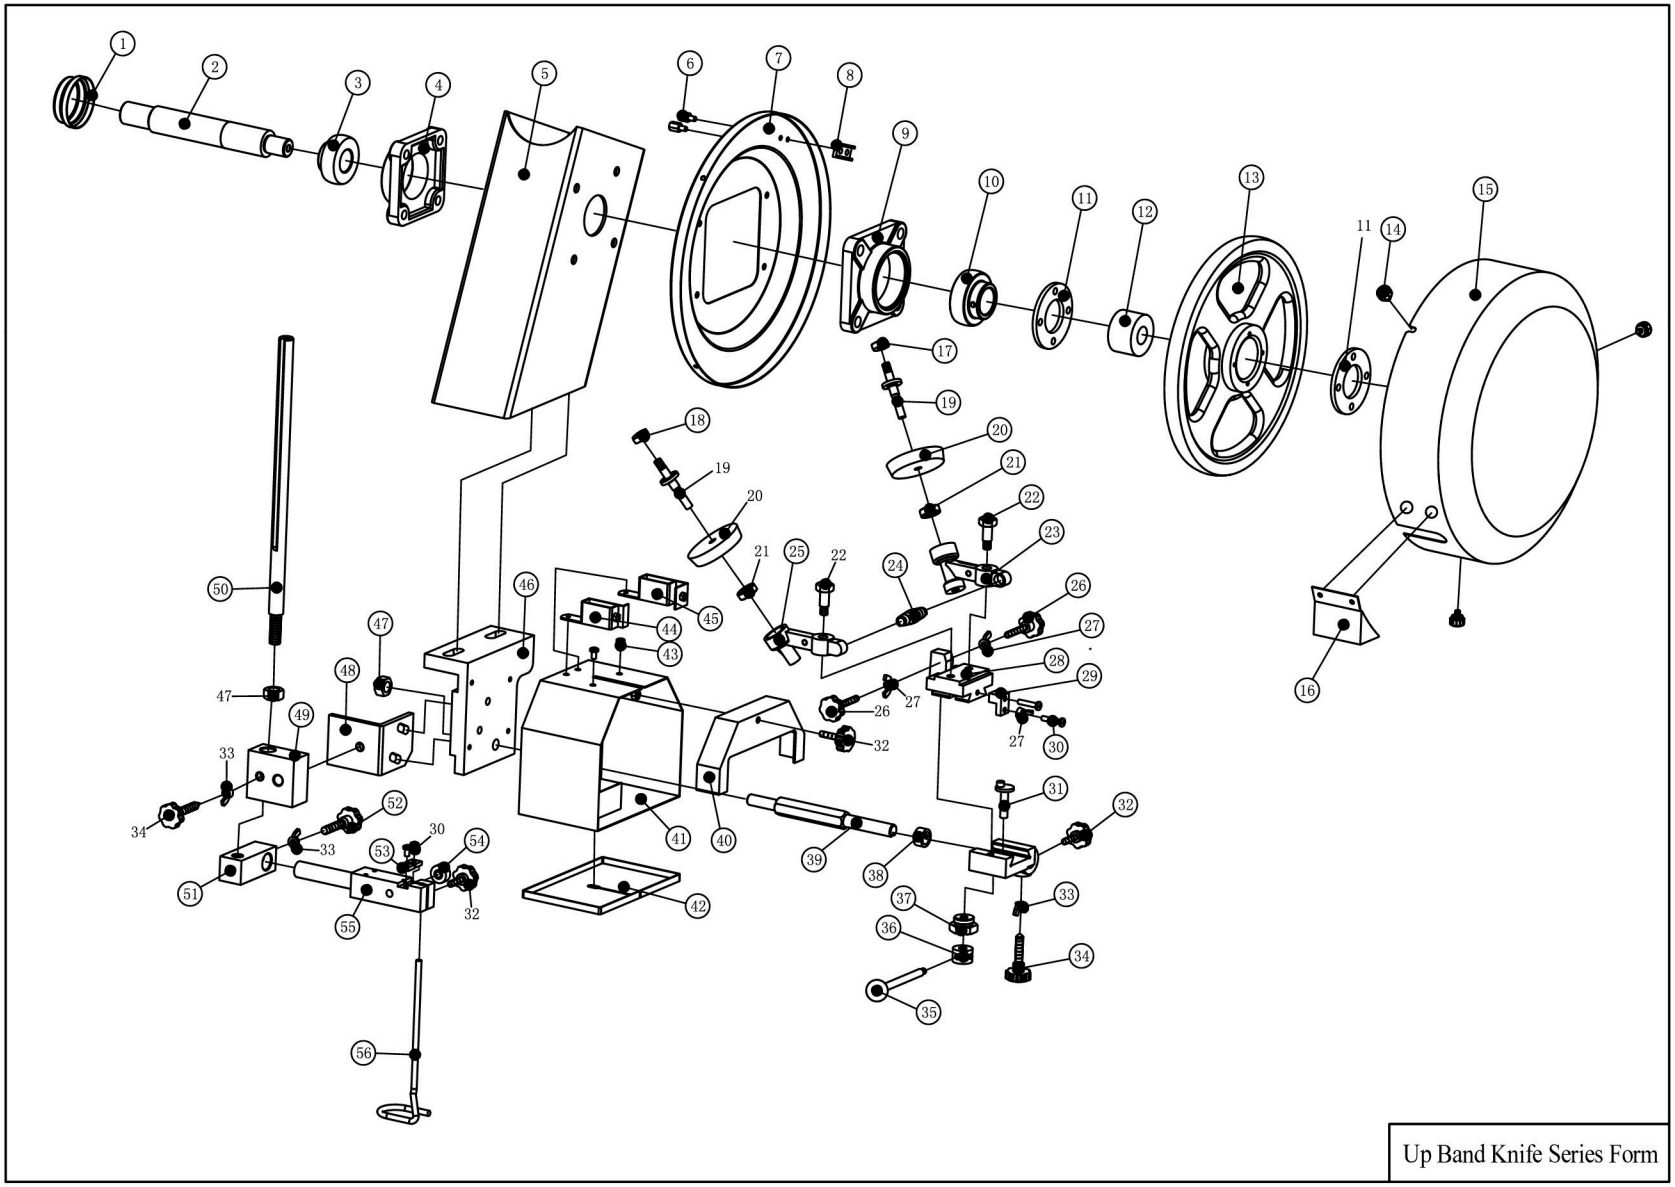

Up Band Knife Series Form

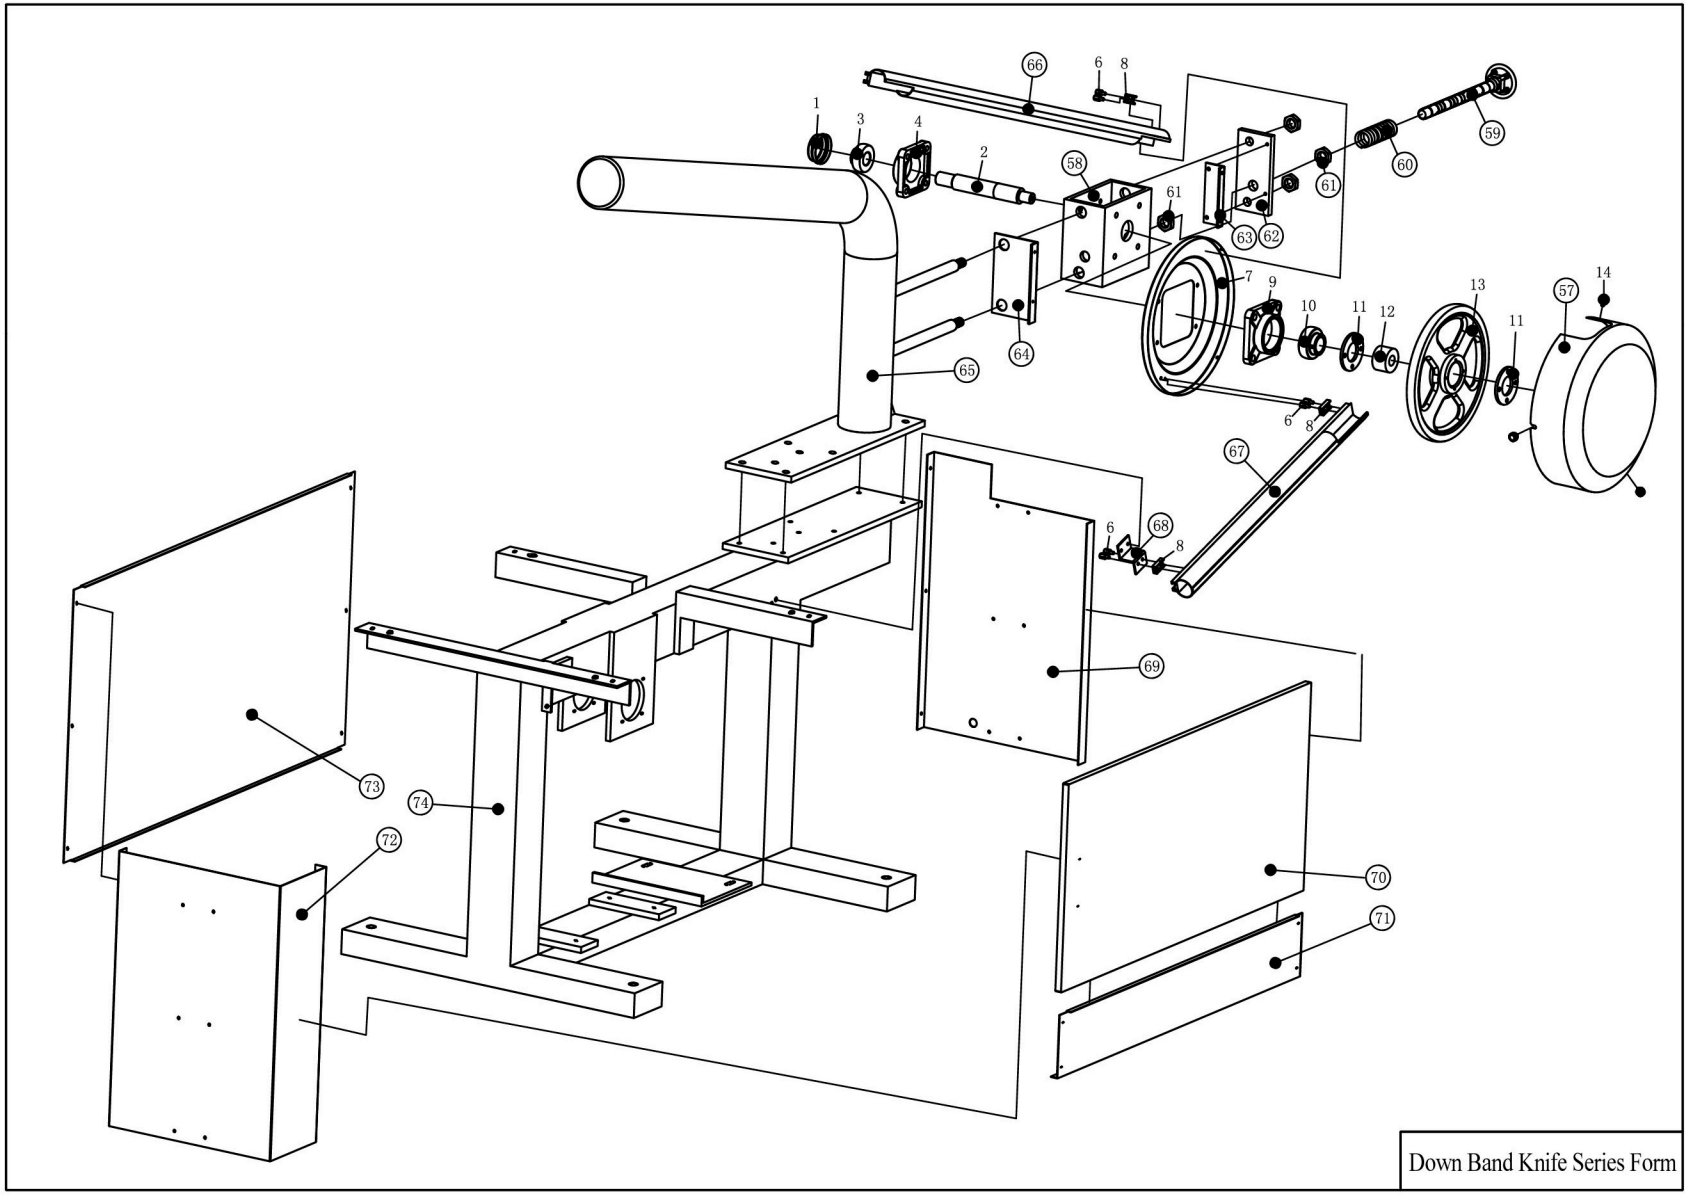
Down Band Knife Series Form

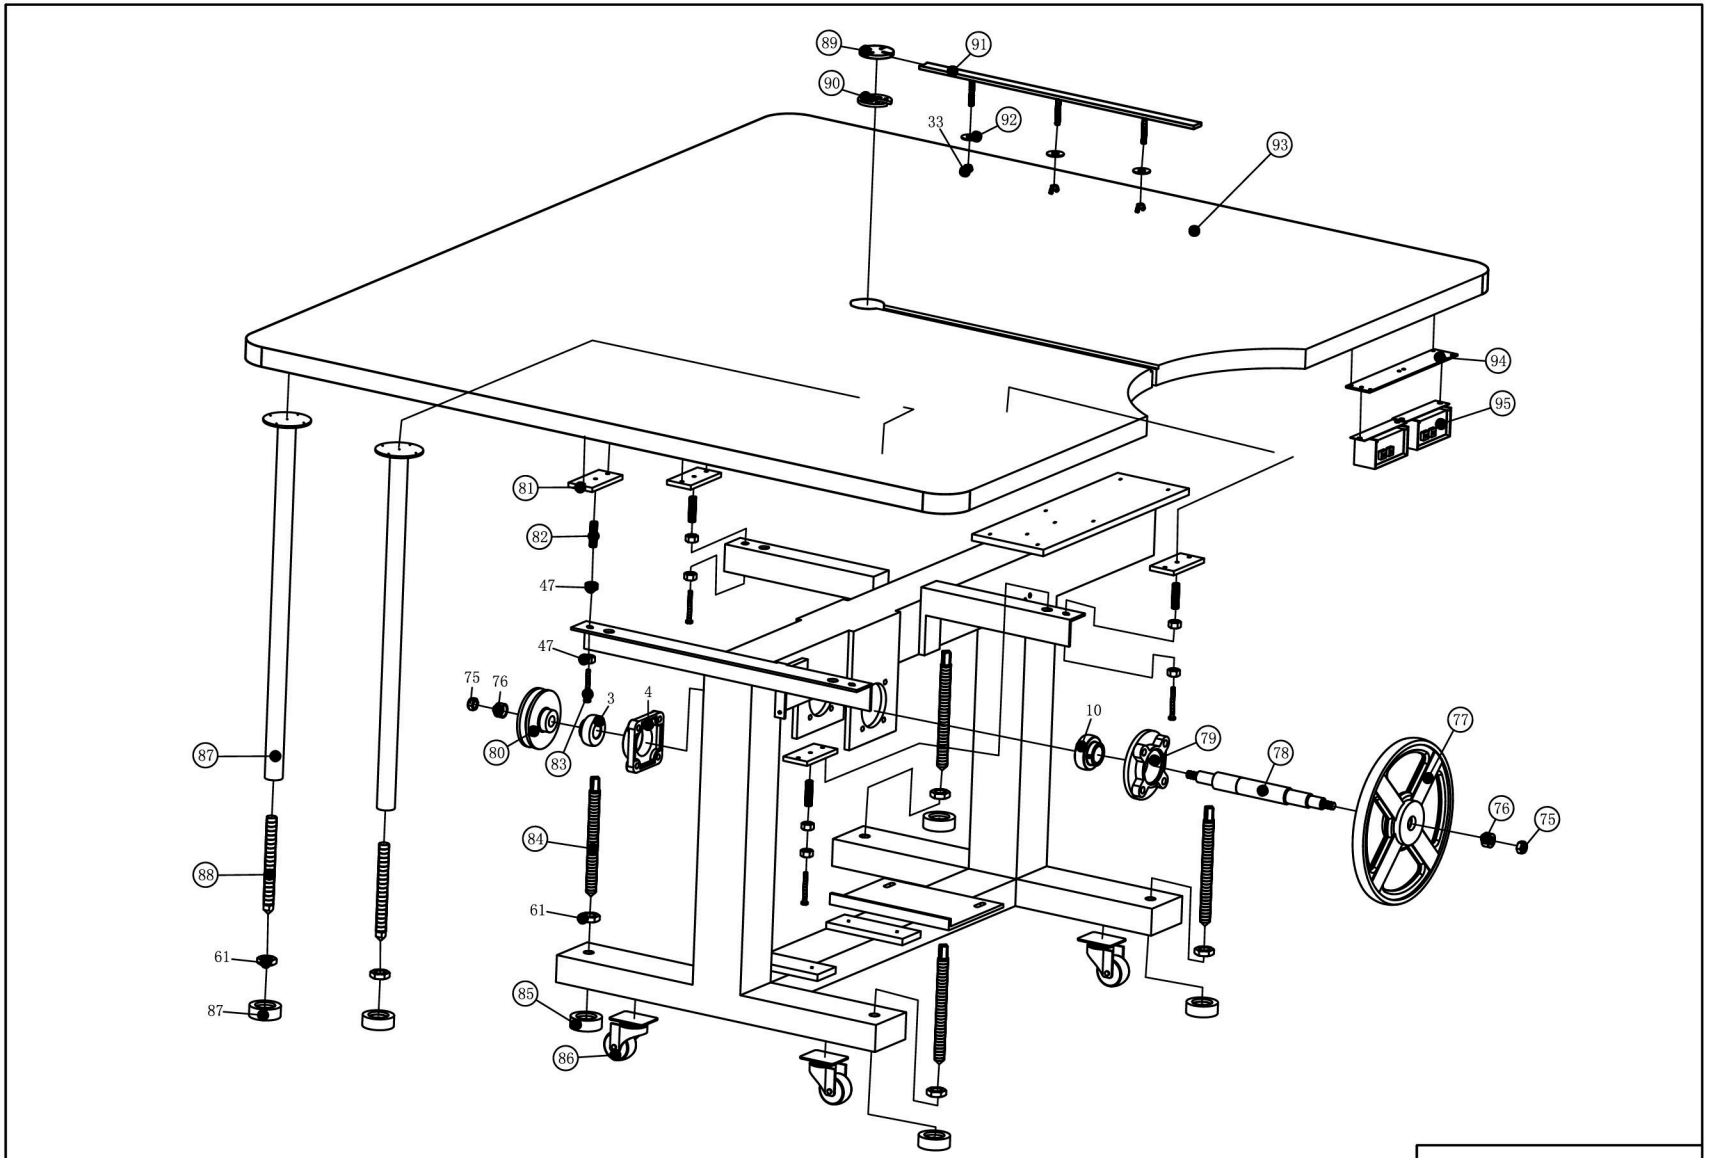

Table Series Form